


STACKED WOOD

QUADRI WALL PANEL

PRECAUTIONS

Always wear work gloves and safety glasses when cutting the product. Read the installation instructions and warranty before getting started.

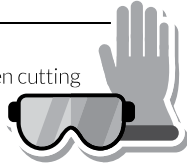

Stacked Wood guarantees the conformity of its products when they are installed according to the installation instructions and are maintained in an environment where ambient humidity ranges between 35% and 55%. Failure to comply with installation instructions shall void the application of the Warranty.

LEAVE THE BOX FLAT ON THE FLOOR IN ITS ORIGINAL WRAPPING UNTIL INSTALLATION.

INSTALLATION INSTRUCTIONS

Tools:


- 100% polyurethane construction glue (3 tubes per 100 ft² or 10 m²)
- Construction glue applicator
- Electric mitre saw
- Sawbench
- Level
- Measuring tape
- X-Acto type knife
- Pneumatic finish hammer (# 23 nails)
- Stepladder

MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN PRIME CONDITION.


First, check the wall(s) is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.

STEP 1:


A: Apply a line of 100% polyurethane glue in the form of a rectangle (1/2" (1.3 cm) from edges) and an X inside the rectangle.

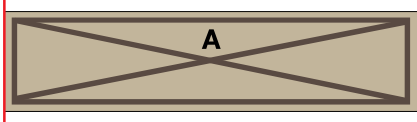

STEP 2: Position the first panel at the lower left section of the wall. Plywood lip to be facing up and right. Make sure the wall panel and row are level.

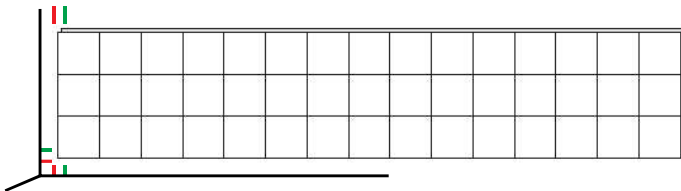


STEP 3: Nail the panel in place with #23 nails on the contour lips and on the two bottom rows in angles between wood pieces. NEVER NAIL DIRECTLY ON THE FACE OF THE NARROW WOOD PIECES.

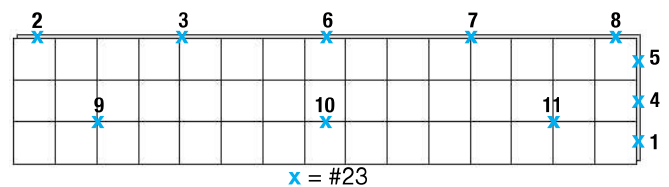

STEP 4: Installation of subsequent panels

- Repeat the gluing procedure
- Align panel B against A
- Repeat the nailing procedure

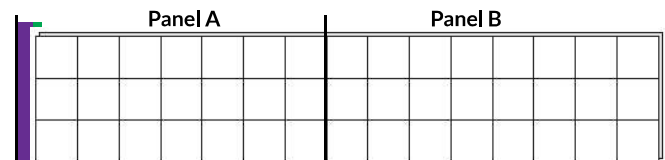

STEP 5: End a row

Before installing the last panel in a row, measure from the top row of the panel already installed where installation is to be completed. The remaining section of panel will serve as the first panel in the next row.

STEP 6: Start a new row

To start a new row, repeat step 1 by using the remaining piece from the first row. Repeat step 2 and 3.

STEP 7: Last row

Cut the panels of the last row lengthwise to fit the given space.

NOTE: if wood pieces detaches from a wall panel, reposition using 100% polyurethane glue.

STACKED WOOD RECOMMENDS THAT YOU VIEW OUR INSTALLATION VIDEO BEFORE GETTING STARTED: STACKEDWOODWALLS.COM/DOCUMENTS

This is a glue AND nail installation. Do not install over material other than drywall or plywood.