




## Stacked Wood Reclaimed Collection Trim and Staining

### Using Trim as Part of a Reclaimed Collection Installation

When installing your Reclaimed Collection wall panels, there are several ways to finish it off. Since our goal is to make installation as easy as possible, we don't require you to use custom moldings that can only be obtained from us.


As a matter of fact, by reviewing the Stacked Wood Reclaimed Collection's Installation Instructions you'll notice several beautiful ways to finish off your accent wall. And if you decide to use trim, it can be purchased just about anywhere, including your local DIY store. You might want to try the following:

1. 3/4" - 1" square molding. Note that pre-colored white molding may be a good match for your Teak Cloud RC panels.

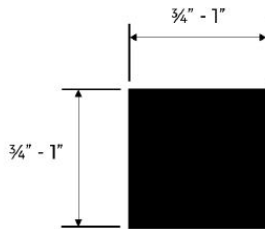

**3/4" - 1" Square Molding**

2. 1" x 1" outside corner molding. Note that the interior dimension must be at least 3/4".

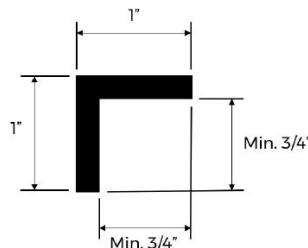

**1" x 1" Outside Corner Molding**



## **Apply Stain to your Stacked Wood Walls Reclaimed Collection Panels**

There are at least two reasons you might want to apply stain to the Reclaimed Collection. The first is because you have a custom color in mind and recently purchased “natural” Reclaimed Collection teak wall panels, which are free of any coatings and ready to stain. The second reason - and probably the more common reason - is to stain the end grain if your pre-stained Reclaimed Collection panels that are cut to size during installation.

Staining the Reclaimed Collection is a straightforward process, if you take the usual care. Teak is an oily wood, which is one reason it is so beautiful and durable. But because of this, it is especially important that you use a good penetrating stain and allow plenty of time for it to soak into the grain before wiping it off. Keep in mind that the end grain will typically take stain differently (usually darker) than side grain. If this is a concern, you can visit ([BobVila.com/articles/how-to-match-end-grain-with-side-grain](http://BobVila.com/articles/how-to-match-end-grain-with-side-grain)).

We’ve had luck with gel stains, especially those by Old Masters®, which are available at various retailers across the country ([myOldMasters.com](http://myOldMasters.com)). Try American Walnut for Teak Coco RC panels (6004) and Weathered Wood for the Teak Cloud RC and Rootwood Beach (6003 and 6007). Make sure you test these stains on the back of a panel before using them on a visible surface, since Stacked Wood is a natural product and color can vary by panel and lot.

Note: That we have no relationship with Old Masters and provide this information only as a starting point. It is certainly possible to achieve satisfactory results with other deep penetrating stains. Whichever stain you choose, follow the label instructions.



**In general, these are the steps we recommend to stain your Reclaimed Collection wall panels.**

1. Wipe the surface of the wood panel clean with a soft brush, removing any sawdust or other particles.
2. Test the stain you've selected. The back of your Reclaimed Collection panels are unstained and a good place to test how the wood will take the stain you've selected. Make sure you're happy with the result on the back before you stain the visible surfaces. NOTE: Once your Reclaimed Collection panels are stained, they cannot be returned for any reason.
3. Generously apply the stain to the panel and allow it to soak into the teak for a few minutes or so.
4. Wipe off excess stain and allow it to dry per the label instructions.
5. If the color is not dark enough, add another coat of stain and repeat the process.
6. No need to add a sealer or clear finish once you are happy with the color. You're done!