

### PRECAUTIONS

Always wear work gloves and safety glasses when cutting product.



### TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft<sup>2</sup> or 10 m<sup>2</sup>)
- Caulking gun
- Electric mitre saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder

WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.


**Do not install over material other than drywall or plywood.**

**MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.**

**FIRST**, check that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.


**STEP 1:** If you are using mouldings mark required space around the perimeter of installation area.

**STEP 2:** Cut the excess wood to be straight with the backing

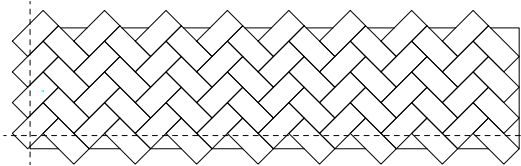


### STEP 3:


**A** Apply a line of 100% polyurethane glue (1/2" (1.3 cm) from the edge) and an X inside the rectangle.




**B** Apply glue on exposed backing.

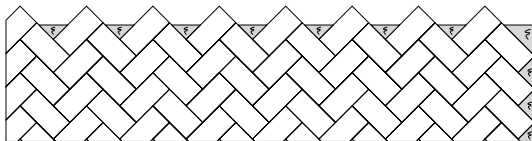

**STEP 4:** Position first panel at lower left of wall. If using mouldings, position in area designated in Step 1.

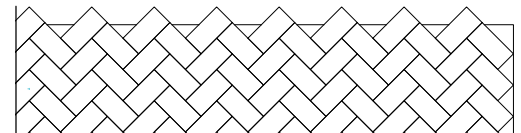

**STEP 5:** Nail panel in place with #23 gauge finish nails on the exposed backing on top and right of the wall panel and at an angle at the bottom row between wood slats. NEVER NAIL DIRECTLY ON FACE OF NARROW WOOD SLATS

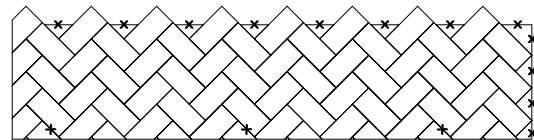

### STEP 6: Installation of subsequent panels

- Repeat step 3.
- Insert panel B into panel A.
- Repeat step 5.



**STEP 7: End row /** Cut any excess of wall panel flush with edge of wall.

**STEP 8: Start a new row :** Use remaining piece from previous row making sure the pattern aligns.

**STEP 9: Last row /** Cut panels of last row lengthwise to fit available space. If required, allow enough space for the moulding.

**STEP 10:** Insert moulding in previously designated area if required

**NOTE:** If wood pieces separate from a wall panel, reposition using 100% polyurethane glue.

Stacked Wood guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%. Failure to comply with installation instructions shall void the application of the Warranty.

PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.