

PRECAUTIONS



This products contains stone wool.
Use goggles, gloves, mask and long sleeves for protection.

TOOLS

- 100% polyurethane construction glue (3 tubes per 100 ft² or 10 m²)
- Caulking gun
- Electric miter saw
- Table saw
- Level
- Measuring tape
- Cutter
- Pneumatic finish nailer (#23 gauge finish nail)
- Stepladder

WALL PANEL NEEDS TO BE GLUED AND NAILED FOR A SUCCESSFUL INSTALLATION AND TO PREVENT FUTURE WARPING. FAILURE TO COMPLY WITH INSTALLATION INSTRUCTIONS SHALL VOID APPLICATION OF THE WARRANTY.

Do not install over material other than drywall or plywood.

MAKE SURE YOUR KNIVES AND SAWBLADES ARE IN TOP CONDITION.

FIRST,

chek that wall is level from floor to ceiling and edge-to-edge. If not, adjust accordingly.

STEP 1: If you are using moldings, mark required space around the perimeter of installation area.


STEP 2:

On the back of the wall panel, apply a line of 100% polyurethane glue on the edges and between the rectangles on the MDF frame and X's in the 3 rectangles.



STEP 3:

Position first panel vertically at bottom right. Make sure each panel and each column is level.

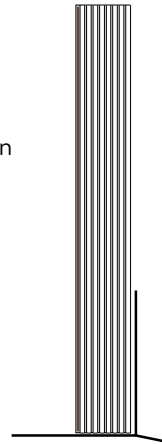

STEP 4:

Nail panel in place with #23 gauge finish nails in the MDF frames on the edges

* Nailing in the membrane will damage the wall panel. Be careful to nail in the MDF frame only.



STEP 5: → Installation of next panels


- Repeat Step 2.
- Set panel **B** against **A**.
- Repeat Step 4.

STEP 6: End a column

Cut any excess of wall panel flush with top of wall.

STEP 7: Start a new column

Use remaining piece of previous column. Repeat Step 2 and 4.

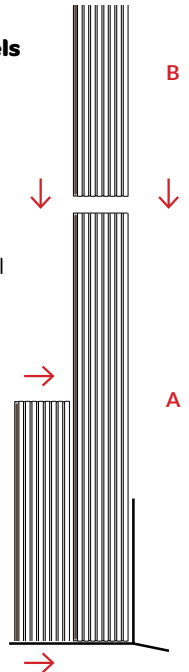

STEP 8: Last column

Cut panel on the left to fit available space.

*** Handle with care when making cuts to the wall panel so as not to damage the membrane on the surface.**

NOTE: if wood pieces separate from a wall panel, reposition using 100% polyurethane glue.

FOR CEILING INSTALLATION:

Apply a fast bonding polyurethane glue on all the surface using a notched trowel and use more nails and a T-brace to hold the panels in place till the glue sets.

Stacked Wood Walls guarantees the conformity of its products when they are installed according to installation instructions and maintained in an environment where ambient humidity ranges between 35% and 55%: before, during and after installation.

PRIOR TO INSTALLATION, PLACE CARTONS IN ORIGINAL PACKAGING FLAT ON THE FLOOR OF PLANNED ROOM.